



Attaching the Fixxon buttons...

1

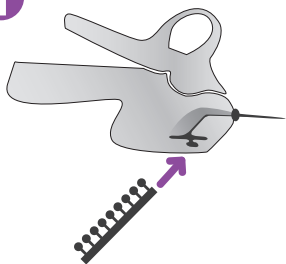

Insert fasteners into the Fixxon gun, using the bottom slot. Push until you feel them 'click' into place.

2

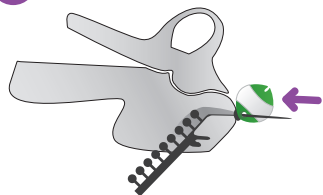


Put needle through round hole of button (printed side facing the gun).

3




Choose where to position the button (see recommended button positioning below). Then fold the material in two.

4

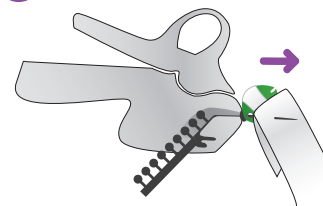

Put the needle of the gun through the material, close to the fold (a few mm away).

5

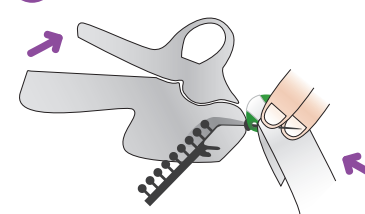


Whilst firmly holding the button and material against the gun, press the trigger to shoot the fastener through both button and material.

6




Using the Fixxon attacher tool, hook underneath the 'T' of the fastener.

7

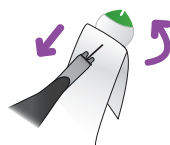

Rotate the button, then stretch the fastener and drop it into the allocated slot.


8

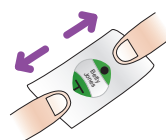

Pull the material taut. The Fixxon button is now firmly attached.

Removing the Fixxon buttons...

1

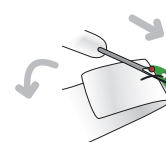

Reveal underside of Button. Place tip of remover tool underneath the fastener. Push forward to cut.

2



The remains of the fastener can be disposed of. The Fixxon button is now ready for re-use.

Recommended button positioning...

Outer garments

Tops, shirts, etc. Position button on the bottom left side, on wash label or seam.

Trousers, skirts, etc. Position button on inside of hem, left leg or left side.



Under garments

Position button on the outside of garment, away from any pressure points.

Alternatively these can be laundered in a net bag with a button on the label of the bag.

