

Fixxon buttons

| | | | | |
|--|---|---------|--------------|--------------|
|  | Fixxon etched buttons with room numbers / names (including fasteners) | 24 pack | FIX-EB-24PK- | W/BL/Y/B/G/R |
| | | 48 pack | FIX-EB-48PK- | W/BL/Y/B/G/R |
| | | 72 pack | FIX-EB-72PK- | W/BL/Y/B/G/R |
| | | 96 pack | FIX-EB-96PK- | W/BL/Y/B/G/R |
| Fixxon etched buttons with room numbers / names are available in 6 colours (white, black, yellow, blue, green & red) including the relevant number of fasteners. | | | | |

Fixxon equipment

| | | | |
|--|--------------------------------------|---------|--------------|
|  | Fixxon starter kit commercial | FIX-SKC | |
| Includes Fixxon gun, attacher tool, remover tool, spare needle and 1000 fasteners. (L23 x W17 x D2.5 cm) | | | |
|  | Fixxon tool kit | FIX-TK | |
| Includes Fixxon gun, attacher tool, remover tool and spare needle. | | | |
|  | Fixxon gun | FIX-G | |
| Fixxon gun for attaching buttons. | | | |
|  | Fixxon attacher tool | FIX-A | |
| Fixxon attacher tool for securing the buttons. | | | |
|  | Fixxon remover tool | FIX-R | |
| Fixxon remover tool for easily removing the buttons. | | | |
|  | Fixxon black fasteners | FIX-BF- | 250/500/1000 |
| | Fixxon clear fasteners | FIX-CF- | 250/500/1000 |
| Fixxon fasteners to use with the Fixxon gun. | | | |
|  | Fixxon spare needles | FIX-N | |
| Pack of 5 spare needles for the Fixxon gun. | | | |
|  | Fixxon spare pins | FIX-P | |
| Pack of 5 spare pins for the Fixxon gun. | | | |

Storage

| | | |
|--|---|--------------------|
|  | Fixxon storage cabinet for tools and buttons | FIX-SC-L-24 |
| <p>Fixxon storage cabinet stores tools and fasteners, plus buttons for up to 24 rooms. Wall mountable. <i>(H41.5 x W27 x D13 cm)</i></p> | | |
|  | Fixxon button storage cabinet - large | FIX-SC-L-40 |
| <p>Fixxon button storage cabinet stores up to 40 rooms. Wall mountable. <i>(H41.5 x W27 x D13 cm)</i></p> | | |
|  | Fixxon button storage cabinet - small | FIX-SC-S-20 |
| <p>Fixxon button storage cabinet stores up to 20 rooms. Wall mountable. <i>(H21 x W27 x D13 cm)</i></p> | | |

Bags

| | | |
|--|--------------------------------|---------------|
|  | Fixxon new garment bags | FIX-GB |
| <p>The new garment bags can be placed in the residents' rooms for new garments that require labelling before they go into the laundry process. <i>(L74 x W51 cm)</i></p> | | |
|  | Net bags | FIX-NB |
| <p>Net bags can be used for washing and drying undergarments and keeping them together during the laundry process. They have a tag on the front where a Fixxon button can be attached. <i>(L62 x W44 cm)</i></p> | | |

Dividers

| | | | |
|---|-----------------------------------|----------------|---------------------|
|  | Fixxon rail dividers | FIX-RD- | W/BL/Y/B/G/R |
| <p>Fixxon rail dividers sit onto the clothes rails. They can be colour coded with numbers or names to match the Fixxon buttons.</p> | | | |
|  | Fixxon hanger disc divider | FIX-DD- | W/BL/Y/B/G/R |
| <p>The discs hook over the hangers to keep the residents' hung garments together whilst being transported back to the room. They can be colour coded with numbers or names to match the Fixxon buttons.</p> | | | |